


1  
TO  
1

*Aristocrat* T.M.

**HIGH GLOSS**

Read this entire insert before using Aristocrat.  
For interior surfaces only. Do not use outside.

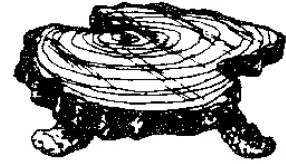

**WARNING** — FATAL OR HARMFUL IF SWALLOWED — If resin side is swallowed, induce vomiting and CALL A PHYSICIAN IMMEDIATELY. If hardener is swallowed, DO NOT INDUCE VOMITING. Dilute by giving water or milk to drink if victim is conscious. GET MEDICAL ATTENTION IMMEDIATELY. If combined mixture is swallowed, DO NOT INDUCE VOMITING. Dilute by giving water or milk to drink if victim is conscious. GET MEDICAL ATTENTION. SEVERE EYE IRRITANT — in case of eye contact, flush with water for ten minutes and seek prompt medical attention. SKIN — Resin and hardener are skin irritants and may cause allergic reaction. Protective clothing, including plastic gloves, should be worn while handling this compound. If POLYMER accidentally comes in contact with skin, wash affected areas with soap and water immediately. AVOID INHALATION — Use in well ventilated areas. The compound left in mixing cup more than 2 minutes will cause heat. Resin contains epoxy bisphenol, a resin. Hardener contains a polyamine curing agent. Polymer should be used only by adults or under close supervision by an adult. KEEP OUT OF REACH OF CHILDREN.

**WARNING** — Before starting on your project, we *strongly* suggest you do a test piece to help you become familiar with this type of product, and for you to decide whether this will be the right product for the type of project you are doing. We do not recommend using Aristocrat on "Fine Furniture".

**ARISTOCRAT** — Aristocrat sets up in about 4 hours, and is cured to touch in 24 hours. One coat is usually all that is needed to capture a glossy shine. Two or more coats may be applied without damaging the first coat. Aristocrat is recommended for interior use only.

**STORAGE** — Aristocrat should be stored in a dry place between 75°F to 80°F and out of the reach of children. Resin and hardener should not be left in an open container. Aristocrat should be used in a room where the humidity is under 60%. This product should be used within one year of purchase.

### TOOLS

1. Mixing containers — Should have smooth, flat bottom and be clean and dust free.
2. Stick — Must have flat, straight edge to ensure thorough mixing.
3. Brush — Sometimes a small brush is needed for coating edges of crevices.



**COVERAGE** — Mix only the amount of Aristocrat that you need at one time. Unused resin and hardener should be left in original containers. After pouring, you have about 20 minutes working time before Aristocrat begins to harden. Coverage for pour coat (1/16 inch).

- 1 oz. of Aristocrat will cover 37 sq. in.
- ½ pint kit will cover approximately 2 sq. ft.
- Pint kit will cover approximately 4 sq. ft.
- Quart kit will cover approximately 8 sq. ft.
- Gallon kit will cover approximately 35 sq. ft.

Note: Pouring over a thickness of 1/16 inch may cause excessive bubbles, yellowing, and distortions in surface. Use multiple coats to achieve desired thickness.

### SURFACE TO BE COVERED

1. For best results, the surface to be covered must be dry and free of dust, wax, grease or oil.
2. The item to be coated should be about 2 inches above the work area so that the extra mixture will drop off the item. It is a good idea to put a newspaper or a drop cloth under the item to catch the drips.
3. Apply tape or paste wax *now* to prepare the back surface of the project for easy drip removal.

**SEAL COATS** — Porous materials require what is called a seal coat in order to prevent air from escaping into the fluid. To seal coat, use ¼ the Aristocrat that you would normally use for a flood coat. Brush a thin coat on the item. Wait about 12 hours and then you are ready to apply the flood coat. A white glue seal coat can also be used. Mix 4 parts white glue to 1 part water. Wait 4 hours, then apply epoxy coating.

**DRIPS** — The excess mixture will drip over the sides of the item being covered. Use one of the following methods to remove these drips.

1. Before pouring apply tape on the edges of the back of the item. After Aristocrat has cured, the tape along with the drips may be pulled off. The cured drips will pull off with the tape as it is peeled away.
2. Drips may be sanded off after the item has cured, if tape has not been used.
3. Drips may be scraped off about 45 mins. after pouring, by running a tongue depressor on the underside edge of the project where drips have formed. Clean depressor off on paper towel often.